

CorelDRAW 11 Setup Instructions

10/10/02

Notice

This publication and its contents are proprietary to Universal Laser Systems, Inc. (ULS), and are intended solely for the contractual use of ULS, Inc. customers.

While reasonable efforts have been made to assure the accuracy of this document, ULS shall not be liable for errors contained herein or for incidental or consequential damage in connection with the furnishing, performance, or use of this material.

ULS reserves the right to revise this document and make changes from time to time without obligation by ULS to notify any person of such revision or changes.

ULS does not assume any liability arising out of the application or use of any products, circuits, or software described herein. Neither does it convey a license under its patent rights nor the patent rights of others.

This publication and its contents may not be reproduced, copied, transmitted, or distributed in any form, or by any means, radio, electronic, mechanical, photocopying, scanning, facsimile, or otherwise, or for any other purpose, without the prior written permission of ULS.

ULS provides no warranties whatsoever on any software used in connection with a ULS Laser Engraving System, express or implied. Neither does it guarantee software compatibility with any off-the-shelf software package or any software program that has not been written by ULS.

Intended use of this system must be followed within the guidelines of this manual. In no event will ULS be liable for any damages caused, in whole or in part, by customer, or for any economic loss, physical injury, lost revenue, lost profits, lost savings or other indirect, incidental, special or consequential damages incurred by any person, even if ULS has been advised of the possibility of such damages or claims.

WARNING

There are different software setup instructions depending on whether you are using Windows 95/98/ME or Windows 2000/XP. It is extremely important that you follow the correct instructions based on your operating system otherwise you will have problems using CorelDraw with your laser system.

Windows 95/98/ME

1. If you have not already done so, install CorelDraw on your computer, but do not open it yet.
2. It is important that your version of CorelDraw is updated with the latest patches and service releases. For the latest releases, check CorelDraw's website, www.corel.com. As of the date of this publication there are no updates available for CorelDraw 11. Be sure to check for any updates from time to time to keep your version current. Please contact CorelDraw if you have any questions regarding these upgrades. ULS is not responsible for any problems as a result from the usage of these patches.
3. The ULS Windows Printer Driver must be loaded before continuing. Your laser system should be connected to LPT1 and the ULS Windows Printer Driver should be set as the default driver. Refer to the Computerized Controls manual that came with your laser system on how to install and use the ULS Windows Printer Driver. After the driver is installed, do not remove the driver disk from your computer at this time.
4. Using Windows Explorer, locate the file named "ULS.PAL" and copy this file over to the C:\Program Files\Corel\Graphics11\Custom Data\Palettes folder.
5. While still in Explorer, locate a file named "corelapp.ini" located in the C:\Program Files\Corel\Graphics11\Config folder. Double-click on the file it will open up in Notepad. Scroll down past the semi-colons to the [Config] header. Then scroll down 23 lines to the line that reads "FontRasterizer=1". Change the 1 to a 0 (this is a zero, not an o). Save this file and then close Notepad.
6. Open CorelDraw and start a new graphic.
7. In the main menu at the top of the screen, click on "Window", then "Color Palettes", and then click on "None". Once again click on "Window", then "Color Palettes", and then click on "Open Palette". After the "Open Palette" pop-up box appears, double-click on "ULS.PAL". The color palette will now appear on the right side of the screen. Directly above the Black-colored square there is a box, click on this box and then click "Set as Default".
8. On the property bar, click on the landscape orientation (the sideways rectangle). If you would like the drawing units in metric, choose millimeters from the drop down list. Now type in the page width and height that matches your laser platform.
9. We now need to adjust the vertical ruler, on the left side of the screen, to match the rulers in the laser system. To do this, we need to adjust the ruler's vertical origin. Double-click directly on the vertical (side) ruler. The "Options" dialog box will appear. In the vertical origin box, type in the same height value as you did when you set up the page height in the previous step. For example, 12 inches for an M 300 machine. If you would like the scale to be displayed in tenths, choose "10 per Tick" in the "Tick Division" drop-down list box.
10. While still in the "Options" dialog box, double-click on "Global" to expand the list. Double-click on "Printing" to expand the list. Make sure that the laser system's name is displayed in the printer drop-down list, if not click on the down arrow to expand the list and click on the laser system. Below the dropdown list, place a check mark in front of "All Text as Graphics", and "Send Bands to Driver". Uncheck (deselect) "send Beziers and paths to driver". Make sure that all the other boxes are unchecked. Now click on "OK" to close the "Options" dialog box.
11. The next step is to set the default value for the line width and color when drawing graphic objects. To do this, click on the outline tool, then the outline pen dialog in the flyout. With "Graphic" being the only one selected, click "OK". Click the down arrow in the Color dropdown box to expand the list and click on the color red. Click the down arrow in the "Width" dropdown box to expand the list and click "Hairline". The units can be "Inches", "millimeters" or anything else you prefer. Click "OK" to close the Outline Pen dialog box.
12. In the top menu, click "Tools", then click "Color Management". Click on the down arrow to expand the "Style" dropdown list. Click "Color Management Off", and then click "OK".
13. Finally, at the top of the screen, click on "Tools", then "Options", then "Document", and then select "Save Options as Defaults for New Documents". Make sure **ALL** the options listed are **CHECKED** then click "OK".
14. The setup defaults for CorelDRAW 11 are now complete. Whenever you start a new document, all of the default settings that we had setup will automatically apply to the new document.

Windows 2000 or Windows XP

1. Make sure that you have installed all Service Releases and software patches from Microsoft. For Windows 2000, install Service Pack 3. If you are reading this document from the ULS Windows Printer Driver CD, as a service to you, you can find the file on this CD. There is an update available for Windows XP included in the ULS Windows Printer Driver CD, but it is not mandatory that you install it. For the latest releases, check Microsoft's website, www.microsoft.com. Please contact Microsoft if you have any questions regarding these upgrades. ULS is not responsible for any problems as a result from the usage of these patches.
2. If you have not already done so, install CorelDraw on your computer, but do not open it yet.
3. It is important that your version of CorelDraw is updated with the latest patches and service releases. For the latest patches and updates go to CorelDraw's website, www.corel.com. As of the date of this publication there are no updates available for CorelDraw 11. Be sure to check for any updates from time to time to keep your version up to speed. Please contact CorelDraw if you have any questions regarding these upgrades. ULS is not responsible for any problems as a result from the usage of these patches.
4. The ULS Windows Printer Driver must be loaded before continuing. Your laser system should be connected to LPT1 and the ULS Windows Printer Driver should be set as the default driver. Refer to the Computerized Controls manual that came with your laser system on how to install and use the ULS Windows Printer Driver. After the driver is installed, do not remove the driver disk from your computer at this time.
5. Using Windows Explorer, locate the file named "ULS.PAL", on the ULS Windows Printer Driver CD, and copy this file over to the C:\Program Files\Corel\Corel Graphics 11\Custom Data\Palettes folder.
6. While still in Explorer, locate a file named "corelapp.ini" located in the C:\Program Files\Corel\Graphics11\Config folder. Double-click on the file it will open up in Notepad. Scroll down past the semi-colons to the [Config] header. Then scroll down 22 lines to the line that reads "Fontrasterizer=1". Change the 1 to a 0 (this is a zero, not an o). Save this file and then close Notepad.
7. Open CorelDraw and start a new graphic.
8. In the main menu at the top of the screen, click on "Window", then "Color Palettes", and then click on "None". Once again click on "Window", then "Color Palettes", and then click on "Open Palette". After the "Open Palette" pop-up box appears, double-click on "ULS.PAL". The color palette will now appear on the right side of the screen.
9. On the property bar, click on the landscape orientation (the sideways rectangle). If you would like the drawing units in metric, choose millimeters from the drop down list. Now type in the page width and height that matches your laser platform.
10. We now need to adjust the vertical ruler, on the left side of the screen, to match the rulers in the laser system. To do this, we need to adjust the ruler's vertical origin. Double-click directly on the vertical (side) ruler. The "Options" dialog box will appear. In the vertical origin box, type in the same height value as you did when you set up the page height in the previous step. For example, 12 inches for an M-300 machine. If you would like the scale to be displayed in tenths, choose "10 per Tick" in the "Tick Division" drop-down list box.
11. While still in the "Options" dialog box, double-click on "Global" to expand the list. Then double-click on "Printing" to expand the list. Make sure that the laser system's name is displayed in the printer drop-down list. In the settings specific for this driver dialog box, make sure that **ALL** the check boxes are **UNCHECKED**. Now click on "OK" to close the "Options" dialog box.
12. The next step is to set the default value for the line width and color when drawing graphic objects. To do this, click on the outline tool, then the outline pen dialog in the flyout. With "Graphic" being the only one selected, click "OK". Click the down arrow in the Color dropdown box to expand the list and click on the color red. Click the down arrow in the "Width" dropdown box to expand the list and click "Hairline". The units can be "Inches", "millimeters" or anything else you prefer. Click "OK" to close the Outline Pen dialog box.
13. In the top menu, click "Tools", then click "Color Management". Click on the down arrow to expand the "Style" dropdown list. Click "Color Management Off", and then click "OK".
14. Finally, at the top of the screen, click on "Tools", then "Options", then "Document", and then select "Save Options as Defaults for New Documents". Make sure **ALL** the options listed are **CHECKED** then click "OK".
15. The setup defaults for CorelDRAW 11 are now complete. Whenever you start a new document, all of the default settings that we had setup will automatically apply to the new document.